

How to work with heatshrink tubing



Measure the heatshrink tubing to length and cut with a scissor. The thickness of your bundle, as well as the desired final appearance, will determine the length of the tubing you cut. Generally, a piece 1 1/2" - 2" long will accommodate almost any need (such as this bundle of network cables). Single wires, or smaller bundles, require shorter pieces.



Slip the tubing over the bundle and position it so that both the sleeved and unsleeved portions are sufficiently covered. Notice the small pieces of tubing installed on single wires as part of a color coding system. If your project requires multiple operations, always work up from the smallest to the largest bundle.



Gently apply heat from a heat gun, hair dryer or torch with an appropriate attachment. Keep the heat source far enough away so that hot metal or direct flame don't come in contact with the tubing, wires or sleeving. Move the heat around the bundle to prevent damaging the sleeving and to ensure that all areas of the tubing have been shrunk. Once cooled, your installation is complete.




**Milwaukee
High Quality
Heat Guns
& Accessories**

Production quality heat guns from one of the finest names in tools. These high quality guns will provide years of dependable service under the most intensive conditions. High strength, impact resistant cases with heavy duty motors and heating elements.

- Dual Temp - HGD8975-6
- Variable Temp LED Display - HGL8988-20
- Accessory Kit - HGA49-80-0300

Techflex helps your projects fly with Shrinkflex and Flexo Sleeving!

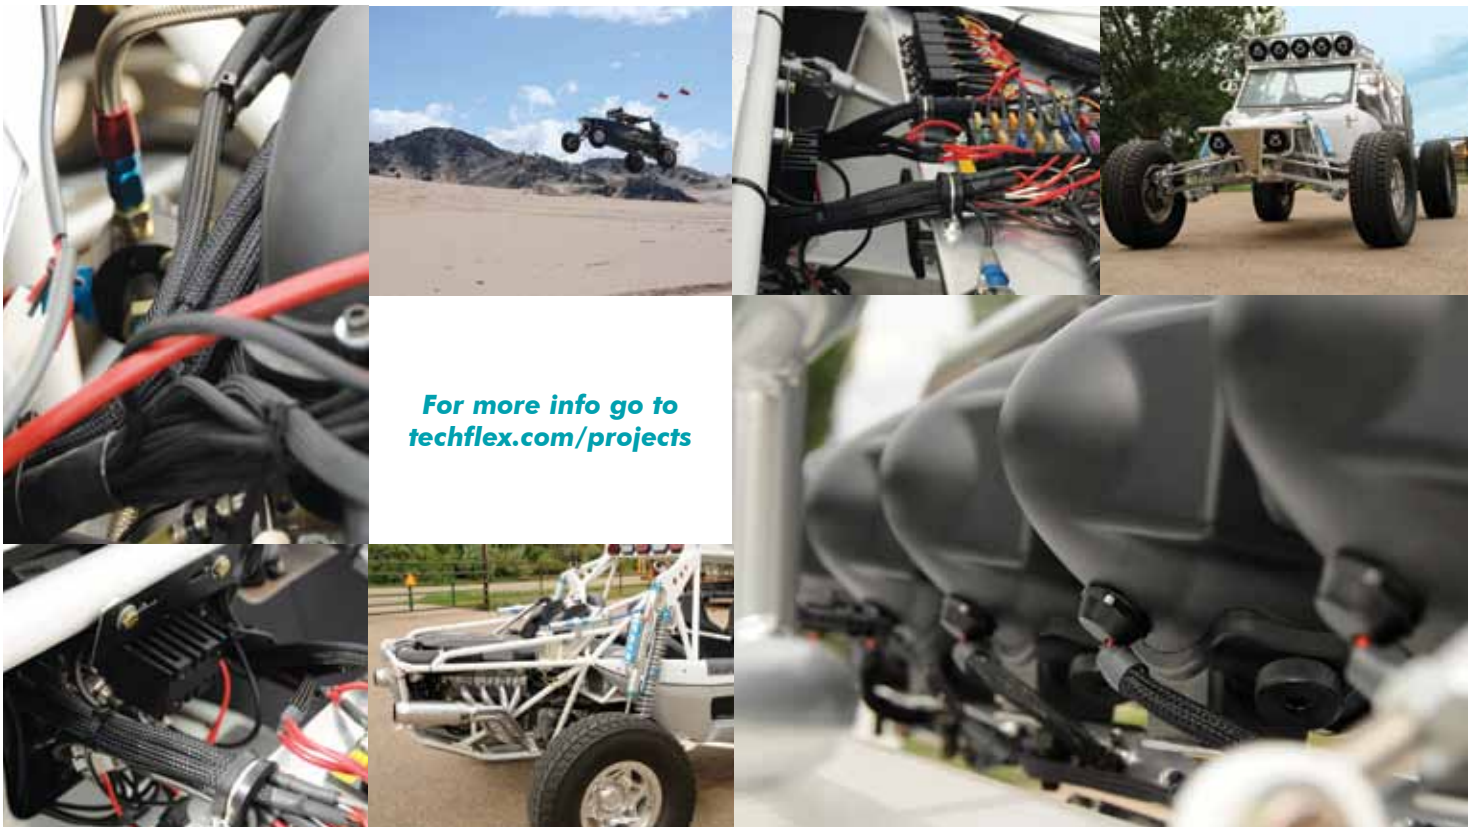

**For more info go to
techflex.com/projects**